


New Bead Expander  
Covers All Passenger Tire Sizes

**DUAL-SAFETY  
FEATURES**

**Designed with a Built-In  
Automatic Safety Valve**

## **NOW...POP BEADS INTO PLACE FAST ON TOUGH-TO-MOUNT BELTED BIAS AND RADIAL TIRES**

**NEW**

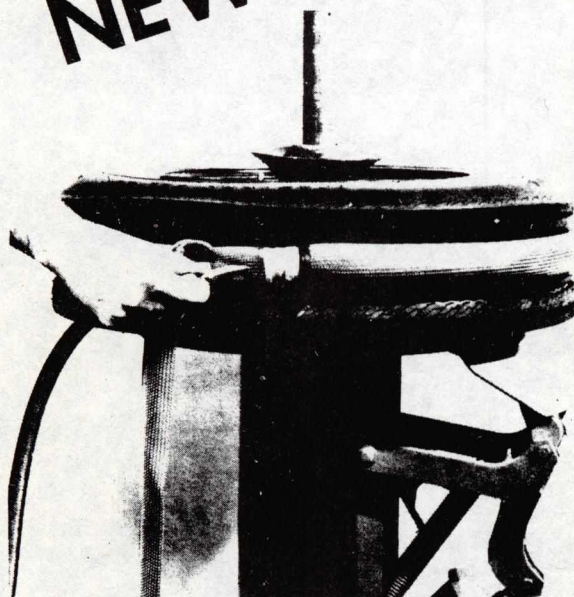

### **AIR DOES ALL THE WORK BEAD FIT IS A-B-C EASY**

- A. Place Bead Expander carefully around center of tire tread and double check this alignment completely around tire before applying air pressure. Pull draw strap tight, which is positively locked in place by two rings.
- B. Apply 65 to 70 lbs. p.s.i. air pressure. As air is applied, inner Neoprene tube expands, causing outer Nylon sleeve to contract, forcing beads tight against rim.
- C. Inflate tire, then flick automatic air release to remove Bead Expander from tire.

**COVERS ALL SIZES OF PASSENGER TIRES  
... NO NEED FOR ADDITIONAL EXPANDERS**

#### **GREATER TIRE PROTECTION**

Special release safety valve automatically releases air when pressure reaches 70 lbs. p.s.i.

#### **TESTED AND APPROVED FOR:**

Bias ply, belted bias, and radial ply using rayon, nylon, fiberglass and steel wire cord construction.

Bead Expander's tough nylon cover and Neoprene inner tube are built for rugged service life. Sturdily constructed lock rings.





Order by No. T-132  
Size: 2 1/4" Diam.  
Shipping Wgt.: 2 3/4 lbs.



# **Kennedy**

HOW BOP BEARS INTO PLACE FAST ON  
TOUGH TO MOUNT BEATED BIAS AND RADIAL TIRE

AND DOES ALL THE WORK  
BEAD IT IS A BEE EASY

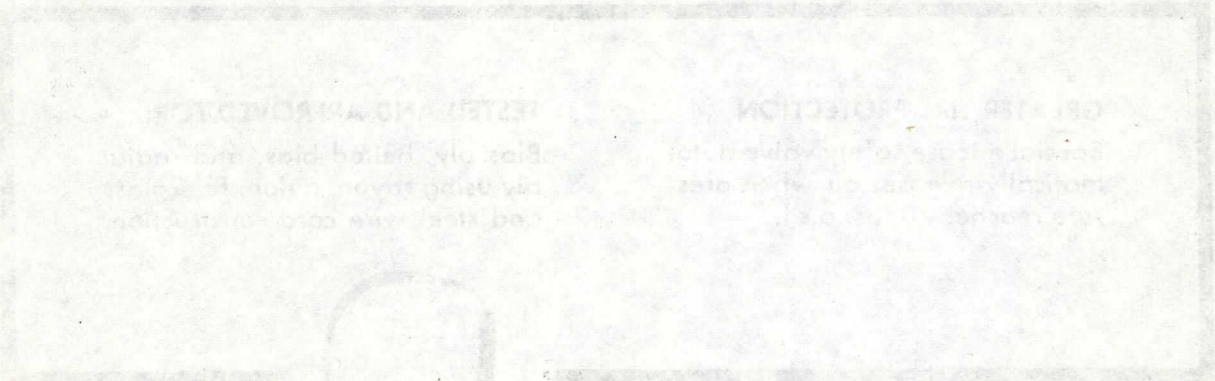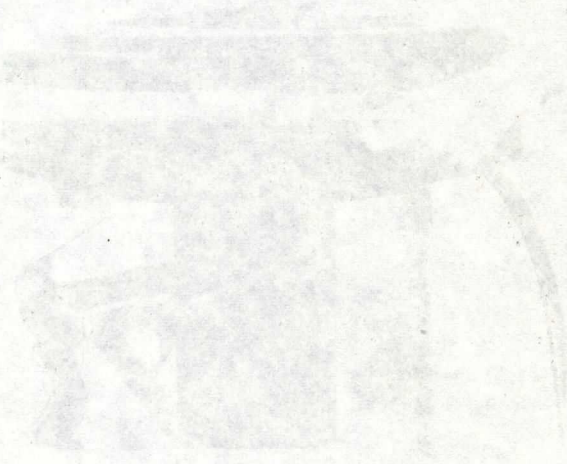

Kennedy